


AVISO:

- ! Antes de soldar adaptadores, des-
rosque la tapa del manguito
■ tipo R / RA de la carcasa.

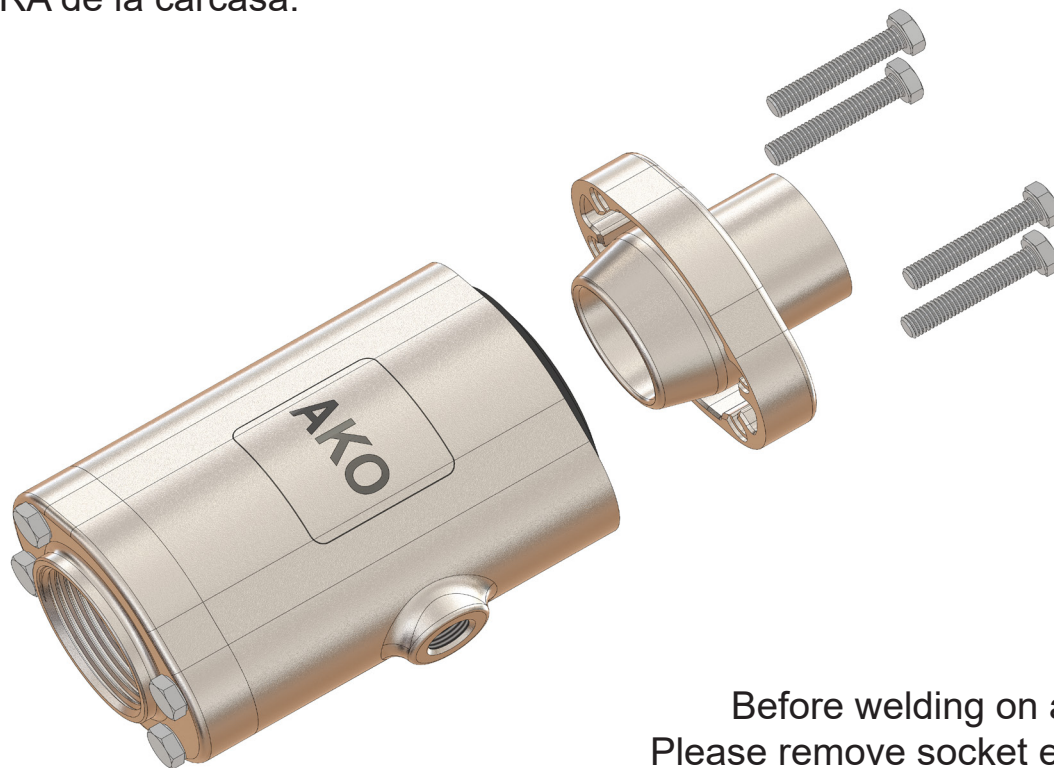

...simply innovative.!



ADVICE:

Before welding on adaptations:
Please remove socket end covers
type R / RA off the body. !